



# LIBERTY'S


Marché Vernaison 93400 ST-OUER - FRANCE

Allée 3/5 Stand 105 Tél : (33) 1 48 82 23 23

<https://www.libertys.com>

## ATMOS CLOCK - Setup and operation:

*NEVER move or shift the ATMOS Clock before locking the balance wheel with the locking lever ( A ) beneath the dial.*

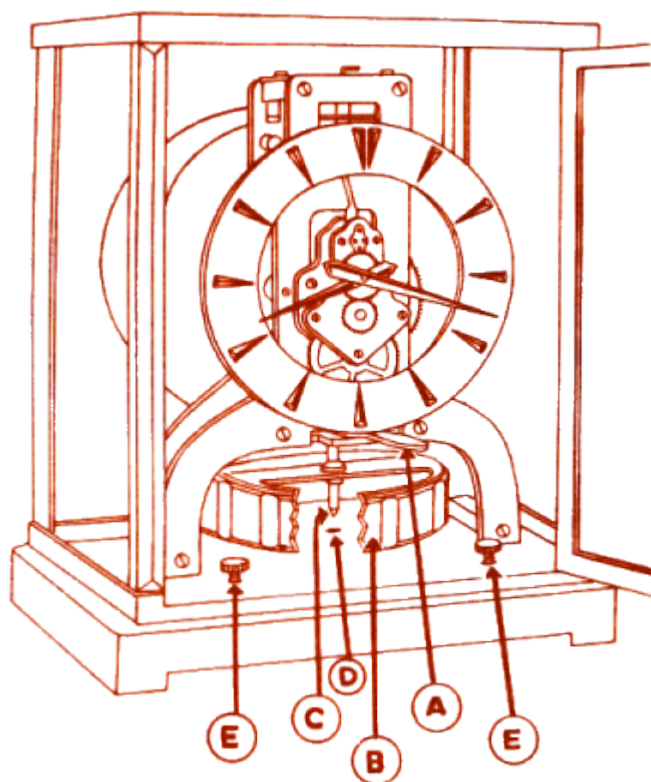

### 1/ POSITIONING:

Place the ATMOS Clock on a mantel-piece or a piece of furniture which is level and sturdy.

### 2/ HOW TO START AND STOP:

To start, push the locking lever ( A ) beneath the dial slowly and completely, from right to left. This starts the balance wheel oscillating slowly. NEVER TOUCH THE BALANCE WHEEL ( B ). To stop and lock balance wheel, push the locking lever ( A ) beneath the dial slowly and completely, from left to right. Never leave the locking lever in a "dead-center" position.

### 3/ HOW TO LEVEL:

ATMOS Clock must always be perfectly level to assure accurate timekeeping. First, put the clock in the place where it will remain - then start the movement, as described in Paragraph 2. The clock is level when the pointed brass pin ( C ), on the bottom of the balance wheel, points directly down to the blue dot ( D ), on the base-plate of the clock. To adjust for true level - while the

balance wheel is oscillating slowly - turn each of the two thumbscrews ( E ) ( E ), on the base of the clock. Turn them alternately until the pin is centered over the blue dot.

### 4/ HOW TO SET:

Push the minute hand with your finger clock-wise. NEVER PUSH THE HOUR HAND.

### 5/ HOW TO REGULATE:

On the top of the clock is a pointed lever which can be set over gradations from "S" (Slow) to "F" (Fast). Allow your clock to run one week without setting, then regulate as necessary.

**DON'T touch the balance wheel or the clock mechanism.**

**DON'T touch the hour hand. Set the clock by moving minute hand only.**

**DON'T move or shift the ATMOS Clock before stopping and locking the balance wheel with the locking lever.**